



NOTE:  
**PASSENGER TRAINS** are shown by direction - W(est) or E(ast) with number of TRAINS.  
 Thus W18 means 18 passenger trains Westward.  
**FREIGHT TRAINS** are shown by direction - W(est) or E(ast) with number of TRAINS and CARS.  
 Thus E18-1250 means 18 freight trains with 1250 cars eastward.  
 Data applies to section between black circles.

CENTRAL REGION  
 DAILY AVERAGE DENSITY  
 OF TRAFFIC FOR JUNE 1948

SCALE: 1" = 8 MILES OCT. 1948