

## **SAFETY**

**IS OF THE FIRST IMPORTANCE  
IN THE DISCHARGE OF DUTY**

### **CHIEF MEDICAL OFFICER**

Phillip Immesoete, M.D.  
4700 N. Prospect Rd.  
Peoria Heights

P. J. Zumwalt, M.D. ....Sheldon  
H. A. McIntosh, M.D. ....Piper City  
J. H. Langstaff, M.D. ....Fairbury  
J. W. Helm, M.D. ....Gridley  
E. N. Gibbens, M.D. ....Gridley-El Paso  
M. D. Patel, M.D. ....El Paso  
Joseph C. Phifer, M.D. ....Eureka  
R. K. Phillips, M.D. ....Glasford  
J. W. Welch, M.D. ....Cuba  
B. I. Mueller, M.D. ....LaHarpe  
B. C. Kappmeyer, M.D. ....Hamilton  
L. W. DeInnocentes, Jr., M.D. ....Logansport

Dr. J. C. Nelson, Eye Specialist  
515 NE Glen Oak Ave.  
Peoria, Illinois

 
Dr. B. J. Williamson  
M.D. and Eye Specialist  
7th and Blondeau  
Keokuk, Iowa

K. R. Burroughs, Chief Dispatcher

M. L. Powell  
R. L. Bundy  
J. L. Carter  
L. F. Fraikes  
J. S. Stell  
Dispatchers

T.P.W. Form 1662

## **TOLEDO, PEORIA & WESTERN RAILROAD COMPANY**

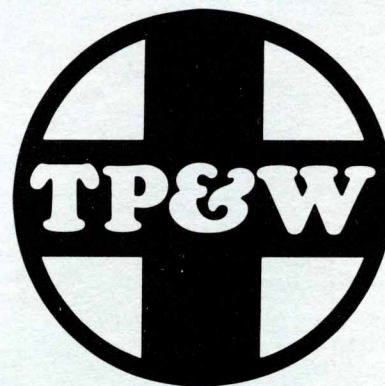

**TIME TABLE  
No. 6  
Takes Effect Sunday,  
November 22, 1981  
at 12:01 a.m.**

**Superseding Time Table No. 5**

**For the Information and  
Government of Employees only.**

R. E. MC MILLAN  
President  
W. R. HOPPER  
Superintendent  
J. R. BROWN  
Assistant Superintendent  
J. FRIEDMANSKY  
Trainmaster

## Make Safety A Habit



T P Willie says:

*Stop and think about it. What risks are you taking with your good health? Are you willing to live with the consequences if you gamble and lose?*

WESTWARD

FIRST SUBDIVISION

EASTWARD

SECOND CLASS		MILE POST	CLIC STATION NUMBERS	TIME TABLE No. 6 STATIONS	CAPACITY OF PASSING SIDINGS IN FEET	TRAIN ORDER STATIONS	SYMBOLS	SECOND CLASS	
25	21							20	24
LOCAL Tue-Thrs Sat	Daily							Daily	LOCAL Mon-Wed Fri
	VIA CONRAIL		50288	LOGANSPORT		N	K.R.B. Y. YD.	VIA CONRAIL	
	6:59 am	6.1E	50281	CON-RAIL 6.1 JCT. KENNETH			R.	9:17 am	
	7:08	12.4E	50274	6.3 BURNETTSTVILLE				9:08	
	7:17	18.9E		6.5 LUTHY	7627			8:59	
	7:20	21.2E	50265	L & N 2.3 CROSSING MONTICELLO	1900			8:56	
	7:32	27.2E	50259	L & N 6.0 CROSSING REYNOLDS	2174			8:44	
	7:49	36.0E	50250	8.8 WOLCOTT	2332			8:27	
	7:57	41.6E	50245	5.6 REMINGTON	1968	D	K.B.Q1	8:19	
	8:08 <sub>20</sub>	49.1E	50237	7.5 GOODLAND	3487			8:08 <sub>21</sub>	
	8:24	57.1E	50229	CON-RAIL 8.0 CROSSING KENTLAND				7:52	
	8:32	61.3E	50225	4.2 EFFNER		D	R.B.Y. K. YD.Q1	7:44	
	8:38	2.1	50224	CR 2.1 CROSSING SHELDON			YD.	7:38	
9:15 am	8:44	4.1	50221	KBS 2.0 CROSSING WEBSTER			YD.	7:32	9:54 am
	9:25	8.54	50214	MP 7.0 CROSSING WATSEKA				7:22	9:44
	9:34	9.03	50208	6.3 CRESCENT CITY				7:13	9:35
	9:39	9.08	50205	3.4 LEONARD				7:08	9:30
	9:44	9.13	50201	I. C. G. 3.8 CROSSING GILMAN	3951	D	Q1.	7:03	9:25
	9:50	9:19 <sub>24</sub>	50195	4.9 LA HOGUE	1687			6:57	9:19 <sub>21</sub>
	9:57	9.26	50190	5.5 PIPER CITY	1868			6:50	9:12
	10:04	9.33	50185	I. C. G. 5.3 CROSSING CHATSWORTH				6:43	9:05
	10:12	9.41		N&W 6.1 CROSSING FORREST JUNCTION				6:35	8:57
	10:13	9.42	50179	0.6 FORREST	2032	N	R.B.K.	6:34	8:56
	10:19	9.48	50173	4.8 FAIRBURY	3487	D	R. Q1	6:28	8:50
	10:28	9.57	50167	6.1 WESTON	2288			6:19	8:41
	10:34	10.03	50162	I. C. G. 4.9 CROSSING CHENOA				6:13	8:35
	10:41	10.10	50158	4.4 MEADOWS				6:06	8:28
	10:47	10.16	50154	4.0 GRIDLEY	1685			6:00	8:22
	10:57	10.26	50147	I. C. G. 7.1 CROSSING EL PASO	2433	D	Q1	5:50	8:12
	11:06	10.35	50140	6.5 SECOR				5:41	8:03
	11:17	10.46		6.8 STREATOR JCT.			R	5:30	7:52
	11:18	10.47	50133	0.4 EUREKA				5:29	7:51
	11:21	10.50	50131	2.0 CRUGER	5402			5:26	7:48
	11:29	10.58		3.5 PEKIN JCT.			R	5:18	7:40
	11:32	11.01	50126	2.0 WASHINGTON	1752			5:15	7:37
11:47 am	11:16 am	108.0	50117	8.5 EAST PEORIA YARD (169.3)		N	R.B.K. YD Q1-Q2	5:00 am	7:22 am

**WESTWARD**

**SECOND SUBDIVISION**

**EASTWARD**

SECOND CLASS			MILE POST	CLIC STATION NUMBERS	TIME TABLE No. 6 STATIONS	CAPACITY OF PASSING SIDINGS IN FEET	TRAIN ORDER STATIONS	SYMBOLS	SECOND CLASS		
	123	121							120	122	
	Local								Local		
	Daily Ex. Sat.	Daily							Daily Ex. Sun.	Daily	
	9:00 pm	3:22 pm	108.0	50117	EAST PEORIA YARD		N	R.B.K. YD.	6:29 pm	10:06 pm	
VIA P. & P.U.			113.9	50108	N&W 5.9 CROSSING IOWA JCT.			Q1 & 2 YD.			VIA P. & P.U.
	10:09	4:31	119.1	50105	5.2 SOMMER	4970		R. YD.	5:20	8:57	
	10:13	4:34	121.5		2.4 KOLBE		N	Q1 & 2 Y.B.K.	5:16	8:54	
	10:14	4:35	122.5	50103	1.0 MAPLETON				5:15	8:53	
	10:21	4:42	127.1	50098	4.6 GLASFORD	1743			5:08	8:46	
	10:34	4:55 <sup>120</sup>	136.8	50088	9.7 RAWALTS	2703			4:55 <sup>121</sup>	8:33	
	10:41	5:02	139.5	50085	BN 2.7 CROSSING CANTON				4:48	8:26	
	10:51	5:12	146.9	50078	7.4 U E SIDING	4798			4:38	8:16	
	10:54	5:15	149.2	50076	2.3 CUBA				4:35	8:13	
	11:01	5:22	154.5	50070	5.3 SMITHFIELD	3611			4:28	8:06	
	11:06	5:27	157.8	50067	3.3 SEVILLE				4:23	8:01	
	11:11	5:32	161.2	50064	3.4 MARIETTA				4:18	7:56	
	11:19	5:40	165.5	50059	4.3 NEW PHILADELPHIA				4:10	7:48	
	11:22	5:43	167.4	50057	1.9 BLAIR JUNCTION			R	4:07	7:45	
	11:26	5:47	170.9	50054	BN 3.5 CROSSING BUSHNELL				4:03	7:41	
	11:38	5:59	179.6	50045	8.7 GOOD HOPE	1704			3:51	7:29	
	11:43	6:04	183.4	50042	3.8 SCIOTA	1696			3:46	7:24	
	11:51	6:12	189.4	50036	6.0 BLANDINSVILLE				3:38	7:16	
	11:59 pm	6:20	195.5	50029	6.1 LA HARPE		D	R.B.Y. YD. Q1	3:30 pm	7:08	
			199.7L	50025	4.2 DISCO						
		6:38 pm	206.0L	50018	ATSF 6.3 INTERLOCK LOMAX			R. YD.		6:50 pm	
VIA A.T.S.F.				50003	15.9 FT. MADISON		N				VIA A.T.S.F.
	123	121			113.9				120	122	

**WESTWARD**

**THIRD SUBDIVISION**

**EASTWARD**

SECOND CLASS		MILE POST	CLIC STATION NUMBERS	TIME TABLE			TRAIN ORDER STATION	SYMBOLS	SECOND CLASS			
	<b>123</b>			No. 6							<b>120</b>	
	Local			STATIONS							Local	
	Daily Ex. Sat.							Daily Ex. Sun.				
	11:59 pm	195.5	50029	LA HARPE	D	R.B.Y. YD. Q1		3:30 pm				
	12:12 am	200.1	50024	<sup>4.6</sup> LA CROSSE				3:17				
	12:27	205.1	50020	<sup>5.0</sup> BURNSIDE				3:02				
	12:39	209.5	50015	<sup>4.4</sup> FERRIS				2:50				
	12:45	211.5	50013	<sup>2.0</sup> McCALL				2:44				
	12:53	216.0	50009	<sup>4.5</sup> ELVASTON				2:36				
	1:04 am	221.7		<sup>5.7</sup> TABERS		YD.		2:25 pm				
		222.6	50002	<sup>9</sup> HAMILTON		Y. YD.						
		223.9	50001	<sup>1.3</sup> KEOKUK	D	R.B.K.						
	<b>123</b>			(28.4)		YD. Q1		<b>120</b>				

SYMBOLS		MILEAGE:
The following symbols indicate:		E. Point Switch of Wye at
"B"—Bulletin Board	"D"—Daytime Train Order Station	Kolbe to Coal Track Switch
"K"—Standard Clock	"N"—24 hour Train Order Station	Kingston Terminal . 2.25 mi.
"R"—Register	"Q"—Radio Base Station	Switch between TP&W Main
"Y"—Wye	"1"—Radio Channel No. 1	Track and ATSF No. 1 at
"Yd"—Yard Limits	"2"—Radio Channel No. 2	Lomax to Fort
		Madison . . . . . 15.9 mi.
		Kenneth, end of TP&W
		Ownership, to Race Tower
		7.2 miles

SPEED TABLE					
Time		Speed	Time		Speed
1 Mile		Per Hr.	1 Mile		Per Hr.
Min.	Sec.	Miles	Min.	Sec.	Miles
1	—0	60	2	—0	30
1	—5	55	2	—24	25
1	—12	50	3	—0	20
1	—20	45	4	—0	15
1	—30	40	6	—0	10
1	—43	35	12	—0	5

## SPECIAL INSTRUCTIONS

### SPEED RESTRICTIONS

Maximum authorized speed over any subdivision:

Freight Train — 40 MPH

#### 1. SUPERIORITY OF TRAINS:

On single track, eastward trains are superior to westward trains of the same class.

#### 2. REGISTER STATIONS:

All trains will register at Effner, Forrest, East Peoria Yard, Sommer, LaHarpe and Keokuk. Trains will not register at Kenneth, Fairbury, Streater Jct., Pekin Jct., Blair Jct., or Lomax unless instructed to do so.

When Operator is on duty at Effner, Forrest or LaHarpe trains may register by O.S. Form 96.

#### 3. CLEARANCE CARD FORM A:

Trains originating at Effner or Webster will require Clearance Card Form A at Effner.

Eastward trains and Westward trains, operating beyond Sommer, originating at East Peoria Yard, must secure Clearance Card Form A from Operations Center.

Trains operating between East Peoria Yard and Peoria will not require Clearance Card Form A.

Eastward Trains originating at Lomax will require Clearance Card Form A at Ft. Madison.

Third Subdivision trains originating at Tabers will require Clearance Card Form A at Keokuk.

Westward trains originating on Second Subdivision that are to be routed to the Third Subdivision must have Clearance Card Form A endorsed "Third Subdivision" before passing west of Yard Limit Board MP 197.0.

Eastward Third Subdivision Trains routed to Second Subdivision must have Clearance Card Form A endorsed "Second Subdivision" before passing east of Yard Limit Board MP 193.89 or west of Yard Limit Board 196.49L.

#### 4. YARD LIMITS:

Yard limits exist at the following locations and all trains will be governed by Rule 93 in these yard limits. Yard limit boards are in place.

Between MP 60.80E East of Effner and MP 4.84 West of Webster.

Between MP 106.66 East of East Peoria Yard and the end of double track East of the Illinois River, East Peoria.

Between MP 113.9 Iowa Jct. and MP 120.47 west of Sommer.

Between MP 121.5 Kolbe and MP 123.7 on Kolbe Main to Kingston Terminal.

Between MP 193.89 East of LaHarpe and MP 197.0 West of LaHarpe (3rd Sub.)

Between MP 193.89 East of LaHarpe and MP 196.49L West of LaHarpe (2nd Sub.)

Between MP 221.34 East of Tabers and Keokuk.

Between MP 204.98L and ATSF Connecting switch at Lomax.

#### 5. JOINT TRACK FACILITIES:

A. N&W trains will enter and leave T.P.&W main track at east switch of passing siding at Fairbury, and will use passing siding for movements between Fairbury and junction of T.P.&W. and N&W track west of Fairbury. If necessary to use main track west of east switch of passing siding, N&W trains must protect in accordance with Rule 99 and in the event of accident N&W trains will be held responsible.

B. Westward ATSF trains, when clear at Pekin Junction, must report Clear to TP&W Dispatcher by telephone.

#### 6. HOT BOX-DRAGGING EQUIPMENT DETECTORS:

Hot Box detectors located at:

MP 31E South Side of Track

MP 27.50 on North Side of Track

MP 86.50 on North Side of Track

Dragging equipment detector works in conjunction with these hot box detectors.

#### EXAMINATION OF JOURNALS FOR WHICH HOT BOX HAS BEEN DETECTED BY HOT BOX DETECTOR:

A. STOP THE TRAIN: Comply with operating rules and locate indicated journal. Journal location will be indicated by signals and digital display board at detector site.

B. VISUALLY inspect entire truck for obvious mechanical defects such as broken bolster, truck side, loose wheel, fouled brake rigging, etc.

C. FEEL journal box, or roller bearing adapter WITH GLOVED HAND (to prevent burn). If it is noticeably hotter than adjacent boxes or adapters — SET OUT THE CAR.

D. FOR FRICTION BEARINGS if box is noticeably hotter, open lid and inspect journal end for heat. If journal end is hotter than adjacent journal ends SET OUT THE CAR.

E. IF no unusual heat has been noticed, feel hub of wheel with gloved hand. If hub is noticeably hotter than adjacent hubs check for fouled brake riggings, or defective brake parts. If cause of overheating can not be found or corrected, then SET OUT THE CAR. If hub is not noticeably hotter when felt with a gloved hand, feel hub carefully with bare hand.

F. IF no unusual heat has been found by the previous steps, make the same check for the two cars in front of and the two cars behind original car.

G. Even if no indication of heat has been found, the car should be watched carefully if left in the train. The detector is sensitive enough to catch trouble which is just beginning and which may not be found by the above steps.

#### 7. MOTIVE POWER RESTRICTIONS:

A. Keokuk Municipal Bridge, Keokuk, Iowa and Slew Bridge 222.89 just east of Keokuk Municipal Bridge restricted to 4 unit diesel power, provided such units do not exceed 3000 HP each. All other bridges are good for multiple unit diesel power, provided such units do not exceed 3600 HP each.

B. Engines 102-103 coupled together or engines 1850 HP or more may not operate beyond East Frog of House Track and inside East Wye Watseka.

C. When engine consist, consists of more than three (3) units coupled and MU'D, before starting back up movement all units except the 3 units next to train must be isolated to prevent jackknifing.

D. Engines will not move over, or onto, the weigh rails of scales on:

East Peoria Yard

Track "3" at Sherex Chemical Company, Kolbe.

Not more than one locomotive unit will be moved over scale at Missouri Portland Cement Sommer and speed will not exceed 3 miles per hour.

## 8. TRACK OPERATIONS:

A. East Peoria Yard includes all tracks from yard limit board Milepost 106 plus 3508 feet to end of double track just east of Illinois River.

Double track extends from Mile Post 108.65 just west of N&W crossing to Mile Post 110.75 just east of Illinois River Bridge.

In operating over double track, all trains and engines will use the right hand track, unless necessary to use the opposite track to avoid delay.

When necessary to use opposite track in making extended movements, permission must be obtained from Yardmaster.

B. At Main Street crossing, P.&P.U. Junction, East Peoria, because of multiple tracks, only one movement at a time will be permitted over this crossing. In the event crossing is occupied, any movement on adjacent TP&W or N&W tracks will stop to clear crossing, wait until movement on adjacent track has cleared crossing and full visibility has been restored to highway traffic before proceeding. In the execution of this order, eastbound movements will have precedence over westbound movements.

Switch and signals at P.&P.U. Junction between N&W and T.P.&W. are operated by remote control from P.&P.U. operators' office at West Washington Street. In case of switch failure, a member of the crew must call P.&P.U. operator at West Washington Street for instructions.

C. At N&W interchange track, East Peoria, derails must be left in derailing position and east and west switches normally lined for N&W.

D. Derail and connecting target is in place on west end No. 1 track, East Peoria Yard, about 15 feet west of switch point of west thoroughfare track. This derail must be kept on the rail at all times that section of No. 1 track is not in use.

E. West yard lead switch out of main track at East Peoria Yard is equipped with a spring switch normally lined for the main track.

F. Normal position for P&PU Junction switch between eastbound main and P&PU connection is lined for P&PU, and must be restored to that position after being used for conflicting route.

G. IOWA JUNCTION AND SOMMER: Yard limits exist between Iowa Junction and Sommer. All trains and engines will operate under provisions of Rule 93, Yard Limit Rule.

Between Iowa Junction and Sommer, train and engine movements will be made only on the authority of the TP&W Train Dispatcher, East Peoria. Westward trains and engines will not leave Iowa Junction and eastward trains and engines will not leave Sommer until permission has been granted.

H. Sand must not be used over spring, remote control or interlocked switches.

## 9. MINIMUM DISTANCE FLAGMAN MUST GO OUT TO AFFORD PROTECTION:

Location	Distance
1st Subdivision (except	1 miles
Between MP 79 and MP 85	1½ miles
Between MP 100 and MP 107	1½ miles
2nd Subdivision (except	1 miles
Between MP 123 and MP 137	1½ miles
Between MP 155 and MP 166	1½ miles
Between MP 196 and MP 205	1½ miles
3rd Subdivision	1 miles

## 10. HANDLING EQUIPMENT

A. EXPLOSIVES: Cars loaded with inflammable articles, acids, dynamite, powder and other explosives and placarded loaded tanks must be handled in accordance with Bureau of Explosives Tariff and supplements thereto (SEE CHART — BACK COVER PAGE).

Tank cars, transporting flammable compressed gas requiring dangerous placards shall not be cut off in motion.

No car moving under its own momentum shall be allowed to strike any tank car containing flammable compressed gas placarded dangerous, nor shall any such car be coupled into with more force than is necessary to complete coupling.

Chief Yard Clerk will notify Yardmaster of any cars of flammable compressed gas carrying dangerous placards.

Yardmaster will notify yard crews and switch list must be marked accordingly. Yard clerks must show on consist to Conductor.

These requirements shall also apply to trains on the road which are required to perform switching operations at intermediate stops.

B. Special Equipment and extra dimensional loads must be inspected for safe side and top clearance and proper blocking before being moved in trains.

C. Trains handling derricks, pile drivers, clam shells, cranes, shovels and other special equipment on its own wheels must not exceed speed of twenty (20) miles per hour, except trains handling locomotive crane No. 99 and snow plow No. 909, must not exceed speed of thirty (30) miles per hour.

D. Dead engines must be placed as near the forward end of trains as conditions and rules governing bridge restrictions will permit.

## 11. PUSHER SERVICE:

The following procedure will govern with respect to handling of pusher engines:

Engineer on train being pushed will take slack out of train at the beginning of grade and before pusher engine starts to push train.

Pusher engine force will not exceed 400 amps. as indicated by the ammeter, until train being pushed gets on the main line when full throttle and normal operation may be resumed.

The conductor of the train being pushed will be responsible for the cutting off of pusher engine, and where it will be cut off. He will not close angle cock on pusher engine.

Angle cock on pusher engine will remain open until pusher engine is cut off and brought to a complete stop.

Attention is called to the importance of moving the handle on the auxiliary angle cock on caboose platform to the closed position before proceeding with any other part of the performance, as failure to close this angle cock will cause the air in train which is being pushed to go into emergency. Under no circumstances will pusher be cut off if either engine is approaching within 800 feet of a road crossing.

Between East Peoria Yard and Washington the Helper Engine, when assisting a train over Washington Hill has the rights of the train to which it is coupled.

The Helper Engine has the authority to return from Washington to East Peoria Yard ahead of second class trains.

The Helper Engine is authorized to return to East Peoria Yard against Eastward second class and inferior trains under the protection of a flag to be left at East Peoria

Yard for that purpose. A member of the crew, preferable the field man, will be left at East Peoria Yard to hold second class and inferior trains until the return of the Helper Engine.

Engines in pusher service between East Peoria Yard and Pekin Junction under this provision must advise dispatcher before departure and report their arrival back at East Peoria Yard to the Train Dispatcher.

Engines working between East Peoria Yard and Pekin Junction on Form "H" Train Orders will return both Conductor's and Engineer's copy of orders back to Train Dispatcher when they arrive back at East Peoria Yard and their work completed.

## 12. OPERATING ON FOREIGN TRACKS:

### A. OPERATIONS OVER P&PU TRACKAGE BETWEEN P&PU JUNCTION AND IOWA JUNCTION:

In addition to applicable TP&W Transportation rules and Special Instructions the following P&PU Transportation Rules and Instructions will apply while operating over P&PU Trackage. TP&W employees are not required to provide themselves with a copy of P&PU Transportation Rule Book.

#### DEFINITIONS:

**AUTOMATIC BLOCK SYSTEM** — A series of consecutive blocks governed by block signals, cab signals, or both, activated by a train or engine by certain conditions affecting the use of a block.

**AUTOMATIC SWITCH** — A Switch equipped with a spring mechanism arranged to cause the points to remain in the position last used after having been trailed through.

**BLOCK** — A length of track of defined limits, the use of which by trains and engines is governed by block signals, cab signals, or both.

**BLOCK OR HOME SIGNALS** — A fixed signal at the entrance to a route or block to govern trains and engines entering and using that route or block.

**BLOCK STATION** — A place from which block signals are operated.

**BLOCK SYSTEM** — A series of consecutive blocks.

**CENTRALIZED TRAFFIC CONTROL SYSTEM (CTC)** — A term applied to a system of railroad operation by means of which the movement of trains or engines over routes and through blocks on a designated section of track or tracks is directed by signals controlled from a designated point, superseding timetable superiority of trains and without requiring the use of train orders.

**CONTROL OPERATOR** — An employee assigned to operate a CTC Control Machine.

**DUAL CONTROL SWITCH** — A power operated switch that is also equipped for hand operation.

**DWARF SIGNAL** — A low signal.

**MANUAL BLOCK SYSTEM** — A series of consecutive blocks, governed by block signals operated manually upon information by telephone, telegraph or other means of communication.

**REMOTE CONTROL** — A method of operating outlying signal appliances from a designated point.

**RESTRICTED SPEED** — Proceed prepared to stop short of train, obstruction, switch not properly lined, or anything that may require the speed of a train or engine to be reduced.

Where automatic block signal rules, interlocking rules, or signal indications require movement at RESTRICTED SPEED, such movement must be made prepared to stop short of train, obstruction, or switch not properly lined and be on the lookout for broken rail or anything that may require the speed of a train or engine to be reduced, but a speed of ten (10) MPH must not be exceeded.

**SIDING** — A track auxiliary to the main track.

**SIGNAL ASPECT** — The appearance of a fixed signal conveying an indication as viewed from the direction of an approaching train or engine, or the appearance of a cab signal conveying an indication as viewed by an observer in the cab.

**SLOW SPEED** — Not exceeding ten (10) mph.

**SPRING SWITCH** — A switch equipped with a spring mechanism arranged to restore the switch points to original position after having been trailed through.

### PEORIA AND PEKIN UNION RAILWAY COMPANY TRANSPORTATION RULES:

 
28(a) — Imperfectly displayed signals must be promptly reported to dispatcher or yardmaster.

104(c) — Automatic switches are identified by letter (A) on the switch stand target.

161 — A yellow flag and, in addition, a yellow light by night, placed on enginemens side of the track, indicates that the track about 3,000 feet distant is in condition for a speed of but ten (10) mph, unless otherwise specified by train order, bulletin, or black numerals on a yellow disc displayed by the foreman at the point where slow track begins. A green flag and, in addition a green light by night, placed on the enginemens side will indicate end of slow track.

281 to 291 — FIXED SIGNALS OF COLOR LIGHT TYPE:

R - RED  
Y - YELLOW

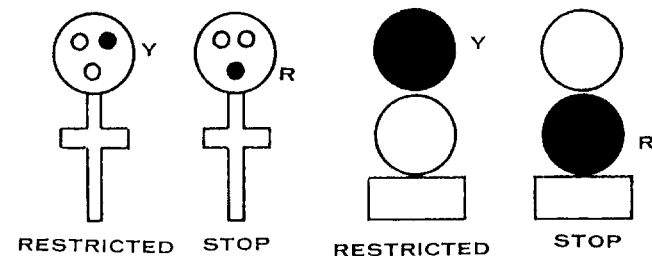

537 — When necessary to operate a dual control switch by use of hand throw lever, permission must be obtained from Train Dispatcher to so operate switch before placing selector lever in hand operating position.

538 — A power operated switch known or thought to be out of order must be reported to Train Dispatcher from first available point of communication.

539 — When through with use of switch, selector lever must be locked to power operating position and so reported promptly to Train Dispatcher.

509 — If, after block or home signal has been called in clear indication the train or engine stops, or is delayed before the signal is reached, the employees must again call to each other the indication of such signal before it is passed.

515 — A train or engine having passed beyond the limits of a block must not back into that block except under protection as prescribed by Rule 99 or authority of Dispatcher.

517 — If any part of a train or engine overruns a STOP indication, front of train or engine must be protected immediately as prescribed by Rule 99 and member of crew must communicate with the Train Dispatcher and be governed by his instructions. The facts must be promptly reported to the Chief Operating Officer by the first available means of communication.

518 — When a block signal indicates STOP one or more of the following conditions may exist:

- (a) Train or other obstruction in the block.
- (b) Main track switch open.
- (c) Car on siding within fouling distance of main track.
- (d) Broken rail.
- (e) Failure of the system.

519 — A signal indicating STOP, which is evidently out of order, must be reported to Train Dispatcher from the first available point of communication.

520 — An absolute STOP signal must not be passed until permission to pass signal is obtained from Train Dispatcher. If the means of communication have failed train or engine may then proceed under flag protection to the next signal displaying a green light or a yellow light, expecting to find one or more of the conditions mentioned in P&PU Rule 518.

521 — When a train or engine has been stopped by a STOP indication, if no conflicting movement is evident, a member of the crew must immediately communicate with Train Dispatcher, identify himself, his train and location, and be governed by instructions received.

522 — Telephones will be located at such signal locations or other points as may be necessary for transmitting and receiving instructions or information, which crew members will use when necessary to facilitate the movement of trains or engines.

523 — To avoid misunderstanding, instructions given by the dispatcher over the telephone must be repeated by the party receiving same and shall not be considered complete until the Dispatcher replies "All Right".

530 — When two or more trains or engines have been coupled and so move past a signal, if separated within block signal limits, Train Dispatcher must be notified.

Unless otherwise instructed TP&W trains will use N&W running track from P&PU Washington Street, to Wesley Junction, Signal indications will govern movements westbound from Wesley Jct. to B J Tower and from Sanger Street to Wesley Jct. eastbound. TP&W trains will use 91 pocket track at the south end of 91 yard and the eastbound main.

TP&W crews on Westbound trains will contact P&PU Dispatcher via radio or TP&W Yardmaster, if unable to communicate with P&PU Dispatcher, after air test has been made at East Peoria Yard and train is ready to proceed. If informed P&PU cannot handle your train, you will wait at East Peoria Yard until P&PU can handle, unless train size permits you to wait on double track to clear street crossings and flasher circuits.

If proceed indications are not displayed on signal-governing movements into P&PU Yard on your arrival at P&PU Junction, you will again contact P&PU Dispatcher or TP&W Yardmaster via radio.

TP&W trains making Eastbound movements through P&PU Yards MUST STOP AT IOWA JUNCTION and contact P&PU Dispatcher via radio or telephone located at Iowa Junction and have permission before entering P&PU tracks.



TP&W crews making deliveries to BN will leave P&PU trackage from southbound main at P&PU-BN Jct. located just west of South St. and use BN main line from this junction through BN yard.

On return movement, before fouling any P&PU trackage, P&PU Dispatcher must be contacted from phone located at South Street and be governed by his instructions.

#### B. RULES AND SPECIAL INSTRUCTIONS GOVERNING TP&W TRAIN AND ENGINE OPERATION ON C&NW MAIN TRACK AT SOMMER, ILLINOIS:

Before operating switches to enter C&NW main track a member of the TP&W crew must communicate with C&NW train dispatcher for authority to enter C&NW main track. When movement by TP&W train or engine is completed and clear of C&NW main track and switches restored to normal position and locked, a member of the crew must report main track clear to C&NW train dispatcher.

The eastward absolute signal at PT crossing will govern, in addition to movements over PT crossing, all eastward movements on the C&NW main track. The aspects displayed by this signal are as prescribed by Rule 240A and 240N of the Consolidated Code of Operating Rules. These Rules are

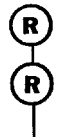Rule	Aspect	Name	Indication
240A		Stop	Stop before any part of train or engine passes the signal.
240N		Restricting	Proceed at restricted speed.

R — Red

L — Lunar

**Definition of Restricted Speed:** "Proceed prepared to stop short of train, engine, obstruction, or switch not properly lined, looking out for broken rail or anything that may require the speed of a train or engine to be reduced, but not exceeding 20 MPH."

#### C. OPERATION OVER BN TRACKAGE:

All movements over BN trackage will be governed by the Consolidated Code of Operating Rules 1967 edition.

BN Trackage Keokuk, Canton, and Peoria, used by TP&W Trains and Engines are within Yard Limits.

No first class trains scheduled in or out of Keokuk, Canton, or Peoria on BN.

## KEOKUK:

Main track switches Keokuk to be lined and locked for Track #5. TP&W crews will not use BN Main at Keokuk south of Track #5 switch, except to make delivery to BN. If necessary to use Track #6 at Keokuk, permission must be received from BN operator in KUD.

## BUSHNELL TO BLAIR JUNCTION

Crossover connecting TP&W Second Subdivision main track and BN 6th Subdivision track at Blair Junction MP 167.4 is in service for operation of unit trains only. TP&W end of crossover is locked with TP&W switch locks. BN end of crossover is equipped with dual controlled power switch. TP&W trains may not enter BN trackage from TP&W without authority of BN Dispatcher and proper signal indication. Trains may not enter TP&W trackage from BN without clearance card Form A and train order permitting it to occupy TP&W Main track.

## CANTON

Before fouling East Wye, Canton, Illinois a member of crew must contact BN operator at Canton by using BN block phone. If unable to contact BN Operator or Dispatcher, contact TP&W Dispatcher for instructions.

TP&W trackage rights extend 3600 feet south of south Gorman Track Switch.

## PEORIA

When shoving cars over Cedar Street, Peoria, a member of the crew must be on the ground a sufficient length of time before crossing is occupied.

Employees are prohibited from occupying sides of car on Yard Tracks Nos. 11, 12, 13 and 14 BN Yard, Peoria, Illinois while cars are in motion.

### SPEED RESTRICTIONS IN BN PEORIA YARD

Between Edmund Street and Burlington Elevator,  
Peoria - 10 mph

Between 150 feet east of Edmund St. and Edmund Street,  
Peoria - 5 mph

Over Cedar Street, Peoria - 5 mph

## D. OPERATIONS OVER KUD YARDS AND KEOKUK MUNICIPAL BRIDGE:

Eastbound trains making movement from the Yard to Keokuk Municipal Bridge Track must contact the bridge signalman and have his assurance that he can handle movement before fouling BN Main Track. Movement must be made within ten (10) minutes after acknowledgement.

The following rules and regulations govern the operation of trains and engines upon the tracks and bridge of the Keokuk Municipal Bridge.

All movements must be made under full control and on no occasion shall speed exceed 10 miles per hour.

A light must be displayed to the front and rear of all trains, cuts, and engines by night.

Westbound crews must stop at stop board located just east of the draw and have clear indication of color light signal located on right side of track opposite draw house before proceeding.

Eastbound crews must have clear indication of color light signal located at west end of bridge before proceeding.

A yellow light is installed approximately 95 feet west of eastbound color light signal and indicates to eastbound movements that draw span is in operation. Trains and engines finding a yellow signal displayed must stop and may proceed to eastbound color light signal.

Making up of trains and switching is not permitted on the bridge, except after an understanding with the draw bridge operators. The final double of eastbound trains may be made on the bridge, however engines will not be reversed if drivers are on mitre rails. Engines must move forward until drivers are clear of mitre rails before making reverse movement.

## E. OPERATION OVER AT&SF TRackage LOMAX TO FT. MADISON:

On arrival Lomax and before entering AT&SF Main Line you will change Radio Channel to AT&SF frequency by changing toggle switch from TPW-F1 to AT&SF frequency.

Enginemen will notify conductor when this change is to be made and after changeover is complete, engineman and conductor must verify that radio is working properly.

TP&W crews will be governed by AT&SF Timetable and Operating Department Rules as revised January 5, 1975 and all crews operating over AT&SF trackage must provide themselves with a copy.

The following instructions in addition to Timetable and Operating Rules must be followed.

### LOMAX TO FORT MADISON:

1. Train orders affecting TP&W trains on AT&SF trackage will be issued by TP&W Dispatcher on TP&W Clearance Card and Train Order Forms.
2. Proceed indication on TP&W interlocking signal at Lomax authorizes a TP&W train to run Extra Lomax to Fort Madison. AT&SF Numbered Clearance Card is not required at Lomax.
3. Crews will yard their trains at Fort Madison on instructions from AT&SF Yardmasters.
4. All TP&W trains must register on AT&SF Register Book in Register Room in New Station Building.

### FORT MADISON YARD:

Switches leading from inbound and outbound leads, and crossovers between these leads will be left lined for movement on these leads east of Dry Creek.

Freight crews ready to depart Ft. Madison Yard will advise Yardmasters and secure his permission before departure.

Fire Road Crossings must not be left blocked.

Telephone boxes and booth doors must be closed after being used.

Road crews will not make change in consist of trains at Ft. Madison.

When a car is set out between terminals account Bad Order, it should, if possible, be left where it can be driven to by truck for making repairs.

Speed Restriction Ft. Madison Yard — 5 mph.

## DALLAS CITY

Switch key controllers for crossing gates at Oak (Main) street located at Oak street in cast iron box on south side of relay case. Controllers stencilled "Lower Gates" and "Raise Gates" provide for controlling gates when eastward main track is occupied.

In complying with ATSF Operating Department Rule 316, in addition to radio or telephone reporting, you will make wire report joint with Signal Supervisor at Shopton and Trainmaster on which territory the signal irregularity is found, from first open telegraph office.

### F. OPERATION OVER CR TRACKAGE LOGANS-PORT TO KENNETH:




All operations between Logansport and Kenneth will be governed by CR rules for conducting transportation, special instructions and timetable.

## 13. SIGNALING AND INTERLOCKING GOVERNING OPERATIONS OVER RAILROAD CROSSINGS AT GRADE AND CONNECTING TRACKS:


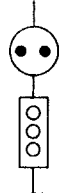
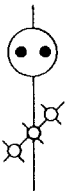
### A. KENNETH:


Remote controlled interlocking, controlled from Van Tower. Power controlled switch connects TP&W 1st Subdivision main track with CONRAIL Columbus to Chicago main track.

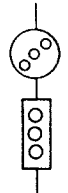Distant signal is located 6000 feet west of Home Signal and is of the position light type. Distant Signal may display the following aspects.

Aspect	Name	Indication
	Approach Medium	Proceed approaching next signal at medium speed.
	Approach	Proceed prepared to stop at next signal. Train exceeding medium speed must at once reduce to that speed.
	Caution	Train exceeding medium speed must at once reduce to that speed. Approach next signal prepared to stop.

Home signal is located 664 feet West of TPW-CONRAIL connecting switch and is of the position light type and may display the following aspects.

Aspect	Name	Indication
	Stop signal	STOP
	Medium clear	Proceed: Medium speed within interlocking limits
	Medium approach	Proceed at medium speed preparing to stop at next signal

Aspect	Name	Indication
	Stop & proceed	Stop and then proceed at restricted speed

- Indicates "Red light"
- Indicates "Yellow light"
- Indicates "Flashing yellow light"

### DEFINITIONS:

(Medium Speed) Not exceeding 30 MPH

(Restricted Speed) Proceed prepared to stop short of train, obstruction or switch not properly lined, looking out for broken rail, not exceeding 15 MPH.

### B. MONTICELLO:

Automatic Interlocking governs movements over L&N Crossing with Dwarf Searchlight Type Home Signal and inoperative Distant Signals.

Distant Signals are of the Semaphore type, fixed in the diagonal position, and are located 6000 feet east and 6000 feet west of L&N Crossing. Indication of signal — Proceed prepared to stop at Home Signal and be governed by Aspect of Home Signal.

Home signals are located 250 feet East and 250 feet West of L&N Crossing and may display Red or Green Aspects.

Aspect	Indication
Red	Stop
Green	Proceed at authorized speed

If proceed aspect is not received and no conflicting movement is observed on L&N Track a member of crew must operate emergency release located in the North West Quadrant of the crossing and be governed by instructions located in the emergency release box before movement is made over crossing.

#### C. REYNOLDS:

Automatic Interlocking governs movements over L&N Crossing with Dwarf Searchlight Type Home Signals and inoperative Distant Signals.

Distant Signals are of the Semaphore type fixed in the diagonal position and are located 5800 feet East and 5800 feet West of L&N Crossing. Indication of signal — Proceed prepared to stop at Home Signal and be governed by aspect of Home Signal.

Home Signals are located 400 feet East and 200 feet West of L&N Crossing and may display Red or Green Aspects.

Aspect	Indication
Red	Stop
Green	Proceed at authorized speed


If proceed aspect is not received and no conflicting movement is observed on L&N Track a member of crew must operate emergency release located in the North West Quadrant of the crossing and be governed by instructions located in the emergency release box before movement is made over crossing.


#### D. KENTLAND:

Automatic Interlocking governs movements over CONRAIL crossing with position light type Home Signals and inoperative Distant Signals.

Distant Signals are of the Semaphore type fixed in the diagonal position and are located 4171 feet East of Westbound Home Signal and 4171 feet West of Eastbound Home Signal. Indication of Signal, proceed prepared to stop at Home Signal and be governed by aspect of Home Signal.

Home Signals are located 400 feet East and 500 feet West of CONRAIL Crossing and may display STOP or PROCEED aspect.

Aspect  — Indication STOP

Aspect  — Indication PROCEED AT AUTHORIZED SPEED

If proceed aspect is not received and no conflicting movement is observed on CONRAIL track, a member of the crew must operate emergency release located at crossing and be governed by instruction located in the emergency release box before movement is made over crossing.

#### E. SHELDON:

Automatic Interlocking Plant with search light type home signals govern the movement over the TP&W, CR Railroad Crossing.

Home signals will display "RED" or "GREEN" indications.

"RED" indication denotes "STOP".

"GREEN" indication denotes "PROCEED NOT TO EXCEED 20 MILES PER HOUR".

If "GREEN" indication is received and more than six (6) minutes are used on the approach, the signal will automatically revert to "RED".

A release section 300 feet long in advance of the signal must be occupied to again get the "GREEN" indication.

If signal does not assume "GREEN" indication when release section is occupied, emergency release at crossing must be operated. After move is made over crossing, emergency release must be operated to obtain "PROCEED" indication for return.

Release box located in northeast quadrant of crossing.

TP&W trains stopped by red aspect of home signal with no visible movement on conflicting route will after five (5) minutes comply with the following:

1. Observe Yellow indication light in emergency release box. When lighted, CR signals are indicating "STOP", and push button may be operated to obtain TP&W signal.
2. If Yellow indication light is not lighted, this indicates CR signal may be green. Wait four and one-half (4½) minutes and if there are no CR trains in sight, push button may be operated.

When Yellow light is lighted and push button operated, a Green indicator lamp when lighted will indicate that TP&W signals are clear.

If after operating push button the signal does not clear, wait four and one-half (4½) minutes, then lighted fusee will be displayed on each side of crossing and proceed on hand signal from trainmen or enginemen located at crossing.

3. If it has been necessary to use the push button, or hand signals, notify Superintendent at First Open Office.
4. Emergency release box must be locked after use.

#### F. WEBSTER:

Automatic interlocking plant with searchlight type home and distant signals governing the movement over the TP&W-KBS Railroad crossing is in service.

Eastbound and westbound home signals are located about 150 feet in advance of crossing and display "RED" or "GREEN" aspects.

Eastbound and westbound distant signals are located about 7,000 feet in advance of home signals and have a fixed yellow aspect. Approach circuits for home signals begin at distant signals.

TP&W trains stopped by red aspect of home signal with no visible movement on conflicting route will operate manual push button marked TP&W PB located in phone box on east side of control building. 4 minutes and 20 seconds later TP&W home signal should display "GREEN" aspect.

If push button operation fails to cause home signal to display green aspect, train will proceed over crossing under proper flag protection.

When part of train is left standing in the circuit outside home signal, and movement is made over crossing, home signal will display "RED" on return movement and push button operation referred to will not function. **THEREFORE RETURN MOVEMENT IN SUCH CASES MUST ALWAYS BE MADE UNDER PROPER FLAG PROTECTION.**

Maximum authorized speed over interlocker is 20 MPH.

#### G. WATSEKA:

Standard Interlocking Plant with searchlight type home and distant signals is in service governing movements over crossing of TP&W with MP Railroad. Signals are controlled remotely by an operator located in Dolton, IL.

Home signals display "RED", "RED OVER YELLOW" or "GREEN" aspects.

Distant signals display "RED", "YELLOW" or "GREEN" aspects.

MP phone boxes have been installed at each home board on the TP&W. If train has a red board, crew will have to contact MP Operator at Dolton using this phone.

#### H. GILMAN:

Standard Interlocking Plant with searchlight type home and distant signals is in service governing movements over two crossings of TP&W with ICG Railroad.

Signals are controlled by an operator located in ICG Depot between the two crossings.

Home Signals display "RED", "RED over YELLOW" or "GREEN" aspects.

Distant Signals display "RED", "YELLOW" or "GREEN" aspects.

An electric lock is provided on the wye main line switch with an unlock track section 300 feet long in advance of switch. Occupancy of this section releases electric lock on switch.

Emergency key for electric lock is in box on west side of instrument case at eastbound home signal. After use key must be returned.

Derails are installed on both wye tracks, electronic controlled and operated by wye switch. Wye switch must not be returned to normal until last car of train clears the derails.

#### I. CHATSWORTH:

Crossing signaling governing approach and movement over crossing of TP&W with ICG RR.

TP&W signals are of color light type.

HOME SIGNALS display "RED" or "GREEN" aspects.

DISTANT SIGNALS display "YELLOW" or "GREEN" aspects.

TP&W trains stopped by RED aspect of home signal, with no visible movement on the ICG will proceed over crossing UNDER PROPER FLAG PROTECTION.

#### J. FORREST:

Standard Interlocking Plant governs movements over crossing of TP&W with N&W railroad. TPW signals are of searchlight type and are controlled by operator in N.&W. Depot at crossing.

Home Signals display "RED", "RED OVER YELLOW" or "GREEN" aspects.

Distant Signals display "RED", "YELLOW" or "GREEN" aspects.

An Electric Switch Lock equipped with a three minute time release is provided on west wye main line switch with a 300 foot unlock section in advance of switch. Occupancy of this 300 foot section will permit use of west wye main line switch without time penalty. If switch lock unit fails an emergency key will be obtained from operator, which must be returned to operator.

Derails are installed on both west tracks, pipe connected to, and operated by wye switch, therefore west wye main line switch must not be returned to normal until last car of train clears derails.

#### K. CHENOA:

Interlocking Plant in service at Chenoa, Illinois governing movements over crossing of TP&W with ICG Railroad. Interlocking is controlled remotely from ICG control office at Bloomington, Illinois.

Home and Distant Signals of TP&W are of searchlight type. Home Signals display "RED", "RED over YELLOW" or "GREEN" aspects. Distant Signals display "RED", "YELLOW" or "GREEN" aspects.

A telephone has been provided at the crossing to communicate with Bloomington Control Office.

When interlocking signal displays stop indication, a member of crew will call control office for instructions. In case of communication failure, or if a proceed signal can not be displayed, the following instruction will govern:

Train or engine must occupy the track within interlocking limits, but clear of conflicting route for a period of ten (10) minutes. If after this time period, no movement is evident on conflicting route, movement may be made over crossing at RESTRICTED SPEED through interlocking limits.

Crews performing work at Chenoa will immediately go to telephone located at crossing and inform ICG Dispatcher of moves expected to be made across the plant, if any, and the approximate length of time they will be working at Chenoa. Crews will not hold this plant to do work unless authorized by ICG Dispatcher.

#### L. EL PASO:

Automatic Interlocking Plant in service at El Paso governs movements over crossing of TP&W with ICG Railroad.

TP&W signals are of searchlight type.

Home signals display "RED", "RED OVER YELLOW" or "GREEN" aspects.

Distant Signals display "RED", "YELLOW" or "GREEN" aspects.

When a TP&W train is on approach circuit to distant signal, and there is no conflicting movement, TP&W home and distant signals will display a green aspect for 5 minutes, after which distant signal will display yellow aspect and home signal will display a red over yellow aspect.

Should any switches within interlocking plant be operated, distant signal for that route will immediately display a red aspect, and the home signal as red over yellow aspect, regardless of time limit.

Occupancy by ICG train for more than five minutes on their approach circuits will cause ICG home signal to display a red over yellow aspect and indication for TP&W movement over crossing can only be obtained by operation of TP&W key release located on a short mast at crossing.

TP&W trains stopping for red indication of home signal, with no visible conflicting movement will operate TP&W key release to obtain indication for movement over crossing. If this method fails to display more favorable aspect of home signal, train will proceed over crossing under proper flag protection.

Unnecessary occupancy of track between home signals is prohibited.

When through movement is being made on green aspect of home signal, the operation of any TP&W switch within the interlocking plant is prohibited until after movement has passed home signal.

No movement within one-half mile of either side of crossing may exceed 35 miles per hour.

Graph recorder provides permanent record of all movements through this interlocking plant.

#### M. EUREKA:

Station signaling is in service between MP 90.3 and MP 94.37, however this does not supersede superiority of trains, nor dispense with compliance of all rules, special instructions and schedules.

Station signaling is made up of three (3) station signals with number plates, two (2) end of station signaling signs on TP&W and a dwarf signal located 270 feet east of Streator Jct. on ATSF Railroad.

Eastward trains on TP&W are governed by signaling from Station Signal No. 938 at MP 93.8 to "End of Station Signaling" sign at MP 90.3.

Westward trains on TP&W are governed by signaling from Station Signal No. 915 at MP 91.50 to "End of Station Signaling" sign at MP 94.37.

ATSF Westward trains from Streator Branch are governed by dwarf signal 270 feet east of junction switch to "End of Station Signaling" sign at MP 94.37.

Eastward Station Signal No. 938 displays RED, YELLOW or GREEN aspect.

"RED" — STOP then proceed at restricted speed to Station Signal No. 924 and be governed by indication of Signal No. 924.

"YELLOW" — Proceed at restricted speed to Station Signal No. 924 and be governed by indication of Signal No. 924.

"GREEN" — Proceed at authorized speed.

Eastward Station Signal No. 924 at MP 92.4 displays RED or GREEN aspect.

"RED" — STOP then proceed at restricted speed to "End of Station Signaling" sign at MP 90.3.

"GREEN" — Proceed at authorized speed.

Westward Station Signal No. 915 at MP 91.5 displays RED or GREEN aspect.

"RED" — STOP then proceed at restricted speed to "End of Station Signaling" sign at MP 94.37.

"GREEN" — Proceed at authorized speed.

Signal Aspects:

Dwarf Signal on ATSF Railroad displays RED or YELLOW aspect.

"RED" — Indicates STOP.

"YELLOW" — Indicates proceed at authorized speed.

If yellow aspect is not received within five (5) minutes, contact TP&W Dispatcher for permission to flag by signal.

ATSF train must not enter TP&W track at Streator Jct. or unlock switch to TP&W main line until permission has been received from TP&W operator at Eureka. If operator at Eureka is not on duty, contact operator at El Paso. If operator at El Paso is not available contact TP&W Dispatcher direct.

#### N. EAST PEORIA:

An automatic interlocking plant governing movements over the crossing of the TP&W with N&W railroad is in service at East Peoria Yard.

Home signals are of searchlight type.

An inoperative eastward approach signal is located 2300 feet west of crossing.

All TP&W Home signals display RED or GREEN aspects.

"RED" aspect indicates STOP.

"GREEN" indicates PROCEED AT AUTHORIZED SPEED.

All signals on TP&W will clear automatically upon entering their respective approaches provided there are no conflicting movements within the limits of the interlocking plant on either railroad.

There are two key releases, one marked "EM" (Eastward Main) and the other "WM" (Westward Main) mounted on mast of eastward home signal.

A TP&W westward movement from the yard, moving beyond eastbound home signal, making a reverse movement, will operate release governing track over which movement is made by inserting switch key in applicable key release and turn to right as far as possible holding for two seconds and then remove key after which, if a more favorable indication is not obtained, reverse movement will then be made over crossing under proper flag protection.

Authorized speed over this crossing is not to exceed 10 miles per hour.

TP&W movement entering approach section to eastward home signal for right hand main causes signal to display a green aspect, and if such movement occupies that section while a movement enters the approach section to the eastward home signal for the left hand main, the left hand home signal will display a red aspect until key release "WM" is operated. The operation of key release will cause the right hand main home signal to display a red aspect and cause left hand main home signal to display a green aspect.

The same procedure applies when movements are reversed as to tracks occupied, except that "EM" key release will be operated.

Key releases must not be operated until it is ascertained that no conflicting movements are approaching on either railroad.

If a green aspect is not obtained by key release method, movement will be made over crossing under proper flag protection.

Movements in either direction stopped by a red aspect of home signal will operate TP&W key release on east end of control case at crossing. This key release operation is the same as operation of key release at eastward home signal, except after key is removed about one minute will elapse until signal displays green aspect.

Key release must not be operated until it is ascertained no conflicting movement is approaching on either railroad.

If green aspect is not obtained by key release method, movement will be made over crossing under proper flag protection.

Unnecessary occupancy of any segment of this interlocker is prohibited.

Graph recorder provides permanent record of all movements through this interlocking plant.

#### O. CANTON:

Unprotected stop.

**P. BUSHNELL:**

Standard Interlocking plant with searchlight type home and inoperative distant signals, governs movements over two crossing of TP&W-BN.

This plant is remotely controlled by BN dispatchers located at Hannibal, Missouri. Home signals display RED or GREEN aspects.

Telephone connected to BN dispatcher are located at home signals. TP&W movements stopped by red aspect of home signal must call BN Dispatcher.

In event of communication failure movement will proceed over crossing under proper flag protection.

Authorized speed not to exceed 20 miles per hour.

**Q. LOMAX:**

Interlocked and dual control connection switch leading from TP&W Main Track to AT&SF south track, located just west of Carman Road, Lomax, AT&SF MP 218.7. Interlocked home signal governing westward TP&W trains and engines from TP&W to AT&SF is located between connection switch and Carman Road.

Automatic approach signal No. 2051 governing westward trains and engines is located 3,343 feet east of westward home signal.

Signals will display ASPECT and INDICATION per AT&SF Rules 281 to 292, inclusive.

Westward trains stopping east of Carman Road Crossing must not foul gate circuit (indicated by ties painted orange) until home signal displays other than STOP indication.

Indications of other than STOP on westward interlocked home signals governing TP&W movements to AT&SF main track at Lomax authorizes movement of TP&W train or engine to Ft. Madison as an Extra. If home signal indicates STOP, AT&SF main track must not be fouled unless authorized by control station (See AT&SF Rule 321 (A) ).

If unable to communicate, further movement is prohibited until communication is established (See AT&SF Rule 321 (B) ).

TP&W-AT&SF connection track switch is dual controlled as are interlocked crossover switches between AT&SF main tracks Lomax (See AT&SF Rule 324).

Maximum authorized speed over connection track switch is 30 miles per hour.

Eastward TPW trains must not accept other than signal aspect to comply with AT&SF Rule 290 at Lomax Interlocking. If eastward home signal indicates other than Rule 290 aspect, stop must be made before fouling interlocking and control station notified.

Control station Telephones are located at:

**WESTWARD:** — Signal House just north of AT&SF Main Track west of Carman Road.

**EASTWARD:** — On pole north of AT&SF main tracks, just east of eastward home signals.

**14. COLOR LIGHT SIGNAL ASPECTS AND THEIR APPLICATION IN SERVICE ON THE TP&W RAILROAD IN GOVERNING OPERATIONS OVER RAILROAD CROSSINGS ARE AS FOLLOWS:**

HOME SIGNALS	
ASPECT	INDICATION
RED .....	STOP
RED OVER YELLOW....	PROCEED AT RESTRICTED SPEED OBSTRUCTED TRACK OR DIVERGING ROUTE
GREEN .....	PROCEED AT AUTHORIZED SPEED
DISTANT SIGNALS	
ASPECT	INDICATION
RED .....	STOP THEN PROCEED AT RESTRICTED SPEED TO HOME SIGNAL AND BE GOVERNED BY INDICATION OF HOME SIGNAL.
YELLOW .....	PROCEED AT RESTRICTED SPEED TO HOME SIGNAL & BE GOVERNED BY INDICATION OF HOME SIGNAL.
GREEN .....	PROCEED AT AUTHORIZED SPEED.

**15. COLOR LIGHT TRAIN ORDER SIGNAL—KOLBE MAIN:**

A Color Light Train Order Signal located on train order mast at Kolbe governs train and engine movements from Kolbe Yard Main to Second Subdivision Main Line. This train order signal displays RED and GREEN aspects.

RED indicates STOP before fouling Second Subdivision Main Track from either east or west leg of wye — Proceed after clearance Card Form "A" is received.

GREEN indicates proceed if Form 19 Train Orders are held authorizing right to Second Subdivision Main Track.

**MUST NOT BE INTERPRETED AS AUTHORITY TO HOLD SECOND SUBDIVISION MAIN TRACK UNLESS AUTHORIZED TO DO SO BY TRAIN ORDER**

**16. SPRING SWITCHES:**

A Spring switch is in service at West End of East Peoria Yard and at East End of double track at East Peoria Yard and West End Crossover P&PU Jct.

Home Signals of TP&W-N&W interlocker govern facing point movements through spring switch at west end East Peoria Yard and at east end of double track.

Excessive gapping of switch points on TP&W spring switches will cause signal governing movement through these switches to display a red aspect, therefore in all cases of movement under flag protection over TP&W-N&W crossing, flagmen must examine facing points of spring switches and know they are in proper position.

Facing point movements through spring switch located at west end crossover P&PU Jct. is governed by a color light dwarf signal which displays RED or GREEN aspects.

RED indicates STOP AND ASCERTAIN IF SWITCH POINTS ARE IN PROPER POSITION FOR FACING POINT MOVEMENT.

GREEN indicates PROCEED AT AUTHORIZED SPEED.

**WARNING: To minimize FIRE HAZARD crews will use extreme care when dropping or discarding fuses and other objects which might cause fire.**

### MAINTENANCE OF WAY DEPT.

A. W. POLICH ..... Vice President-Chief Engineer  
D. G. DE BERG ..... Engineer Maintenance of Way  
D. D. CUNNINGHAM ..... System Engineer  
G. J. KELLY ..... General Roadmaster  
R. S. ST. CLAIR ..... Roadmaster  
C. W. EARNEY ..... Roadmaster  
H. G. FORREST ..... Signal-Communication Supervisor  
H. E. WIEBLER..... Bridge-Building Supervisor

### MECHANICAL DEPT.

L. D. MONEYMAKER ..... Chief Mechanical Officer  
W. E. BROWN, SR. .... General Car Foreman  
C. M. DONIGIAN..... Car Foreman  
J. W. BLACKWELL ..... General Locomotive Foreman  
J. A. MC CONNAUGHAY ..... Roundhouse Foreman  
R. D. UNTZ ..... Roundhouse Foreman

### SPECIAL SERVICES

M. A. KATRICKA ..... Chief Special Agent

 
### OPERATING DEPT.

R. W. METZ..... Superintendent Car Service  
R. D. PETERSON..... Manager Customer Accounting  
Bureau-Station Supervisor  
D. A. BANKS..... Director/Development Operating Systems

### PERSONNEL DEPT.

E. C. FRANKS..... Manager of Personnel

*THIS PAGE IS BLANK  
INTENTIONALLY*

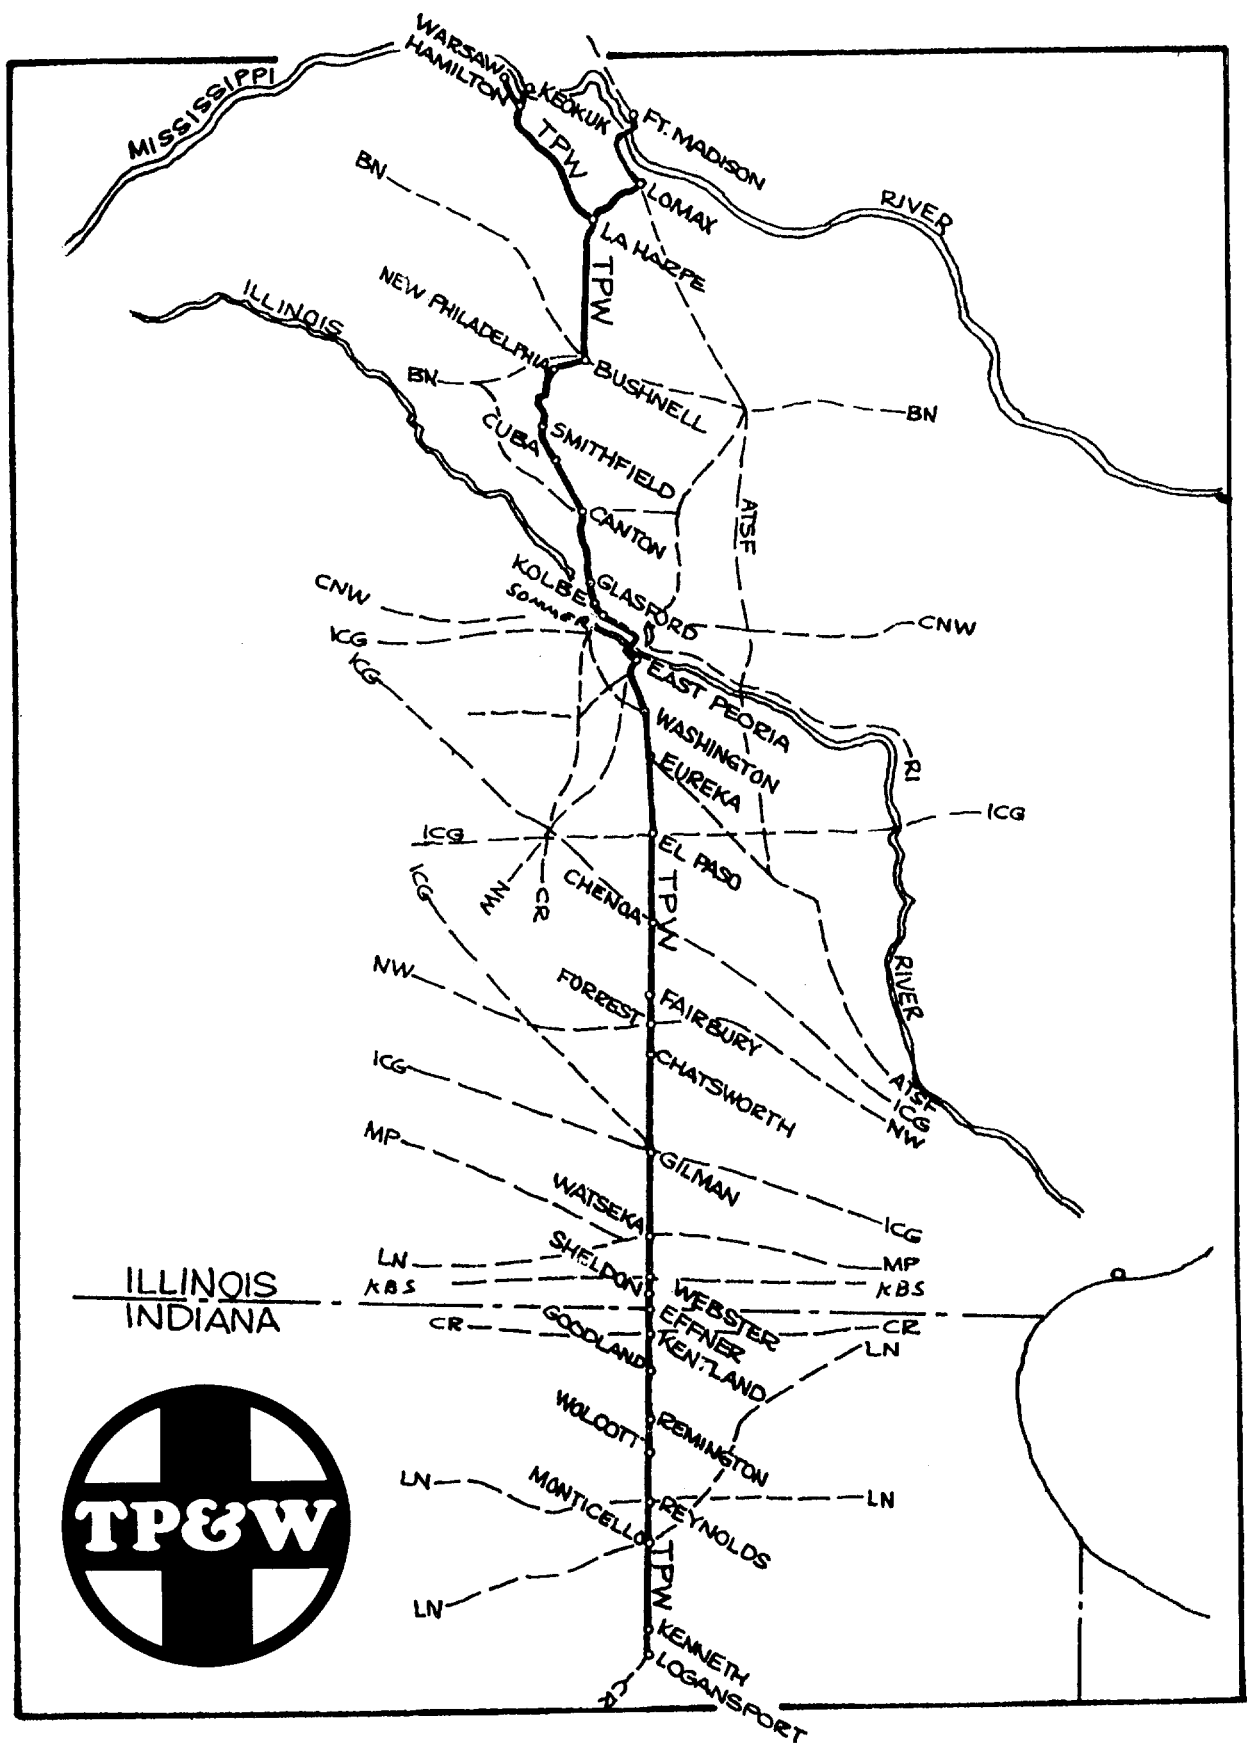

*THIS PAGE IS BLANK  
INTENTIONALLY*

**HOW TO USE THIS CHART:**

To determine where a placarded car can be placed in a train follow these steps:  
 - Determine the type of placard that is applied to the car. From Line 1.  
 - Determine the type of car to which the placard is applied from. Line 2.  
 - Follow vertically down the chart and note which lines apply.  
 - The symbol "✓" indicates wording at the side that applies.  
 See footnotes for explanation.

**POSITION IN TRAIN OF PLACARDED CARS CONTAINING HAZARDOUS MATERIALS**

PLACARD APPLIED ON CAR		PLACARD APPLIED ON CAR									
		EXPLOSIVES-A	POISON GAS	POISON GAS	RADIOACTIVE	ANY PLACARDED LOAD OTHER THAN COMBUSTIBLE OR POISON GAS	OTHER THAN PLACARDED EXPLOSIVES A, POISON GAS OR COMBUSTIBLE	PLACARDED EXCEPT COMBUSTIBLE	COMBUSTIBLE		
TYPE OF CAR		ANY CARS (not for use on passenger trains or cabooses)	TANK CAR	OTHER THAN TANK CAR	ANY CAR	TANK CAR	OTHER THAN TANK CAR	TANK CAR	TANK CAR	COMBUSTIBLE	
3	<b>RESTRICTIONS</b>										
4	WHEN TRAIN LENGTH PERMITS MUST NOT BE NEARER THAN 6th FROM ENGINE, OCCUPIED CABOOSE OR PASSENGER CAR	✓	✓			✓					
5	WHEN TRAIN LENGTH DOES NOT PERMIT MUST BE NEAR MIDDLE OF TRAIN BUT NOT NEARER THAN 2nd FROM ENGINE, OCCUPIED CABOOSE.	✓	✓			✓					
6	LOADED FLAT CAR, A FLAT CAR EQUIPPED WITH PERMANENTLY ATTACHED ENDS OF RIGID CONSTRUCTION IS CONSIDERED TO BE AN OPEN-TOP CAR.	✓ <sup>①</sup>	✓	✓		✓ <sup>②</sup>					
7	AN OPEN-TOP CAR WHEN ANY OF THE LADING PROTRUDES BEYOND THE CAR ENDS OR WHEN ANY OF THE LADING EXTENDING ABOVE THE CAR ENDS IS LIABLE TO SHIFT SO AS TO PROTRUDE BEYOND THE CAR ENDS.	✓	✓	✓		✓					
8	<b>ENGINE</b>	✓	✓	✓	✓	✓			✓		
9	EXCEPT AS PROVIDED IN LINES 10 AND 11, A CAR OCCUPIED BY ANY PERSON OR A PASSENGER CAR OR COMBINATION CAR THAT MAY BE OCCUPIED.	✓ <sup>③</sup>	✓ <sup>③</sup>	✓ <sup>③</sup>	✓	✓	✓ <sup>④</sup>	✓			
10	<b>OCCUPIED CABOOSE</b>	✓ <sup>③</sup>	✓ <sup>③</sup>	✓ <sup>③</sup>	✓	✓		✓			
11	<b>OCCUPIED GUARD CAR</b>	✓ <sup>③</sup>	✓ <sup>③</sup>	✓ <sup>③</sup>		✓					
12	<b>UNDEVELOPED FILM</b>				✓						
13	A CAR WITH AUTOMATIC REFRIGERATION OR HEATING APPARATUS IN OPERATION, OR A CAR WITH OPEN-FLAME APPARATUS IN SERVICE, OR WITH AN INTERNAL COMBUSTION ENGINE IN OPERATION.	✓	✓	✓		✓					
14	A CAR CONTAINING LIGHTED HEATERS, STOVES, OR LANTERNS.	✓	✓	✓							
15	<b>EXPLOSIVES A</b>		✓	✓	✓	✓	✓				
16	<b>POISON GAS</b>	✓			✓	✓	✓				
17	LOADED PLACARDED CAR, OTHER THAN A CAR PLACARDED WITH THE SAME PLACARD OR THE "COMBUSTIBLE" PLACARD.	✓	✓	✓	✓						
18	<b>RADIOACTIVE</b>	✓	✓	✓		✓	✓				

**FOOTNOTES:**

- ① Loaded cars placarded "EXPLOSIVES A" may be placed next to each other.
- ② A specially equipped car in trailer-on-flatcar or container-on-flatcar service or a flatcar loaded with vehicles secured by means of a device designed for that purpose and permanently installed on the flatcar, and of a type generally accepted for handling in interchange between railroads may be placed next to these placarded loaded tank cars subject to the following: this exception for cars in trailer-on-flatcar service does not apply to loaded flatbed trucks, loaded flatbed trailers, loaded open-top trailers, or loaded trucks or trailers without securely closed doors.
- ③ A rail car placarded "EXPLOSIVES A" or "POISON GAS" in a moving or standing train must be next to and ahead of any car occupied by the guards or technical escorts accompanying this car. However, if a car occupied by guards or technical escorts is equipped with a lighted heater or stove, it must be the fourth car behind any car requiring "EXPLOSIVES A" placards.
- ④ Applies only in mixed train service, see section 174.87

**MUST NOT BE PLACED NEXT TO CAR PLACARDED**